

Source Four Lamp Replacement

Before beginning, please ensure that the fixture and lamp have cooled sufficiently

1. Disconnect power to the Source Four before installing the lamp.
2. Loosen the gold knurled bolt on the back of the lamp housing and pull the housing out
3. Undo the lamp retention clips by pinching them together and pulling upwards
4. Carefully remove the defective lamp by wiggling it back and forth until it comes loose
5. Grab the new lamp from its box. To avoid premature lamp failure, do not touch the lamp glass. If you do, clean it carefully with the provided alcohol wipe and allow time to dry before installation.
6. While holding the lamp housing in one hand, align the flat sides of the lamp base with the retention brackets on either side of the socket
7. Push down on the lamp base until the lamp seats firmly. When properly installed, the top of the lamp's base will be even with the top edges of the retention brackets
8. Press lamp retaining clip across lamp base to secure
9. Reinstall the lamp housing by aligning the bolt hole and tightening the gold knurled bolt

